*** FOR DISASSEMBLY, REMOVE THREE SCREWS (33-1, 33-2)**
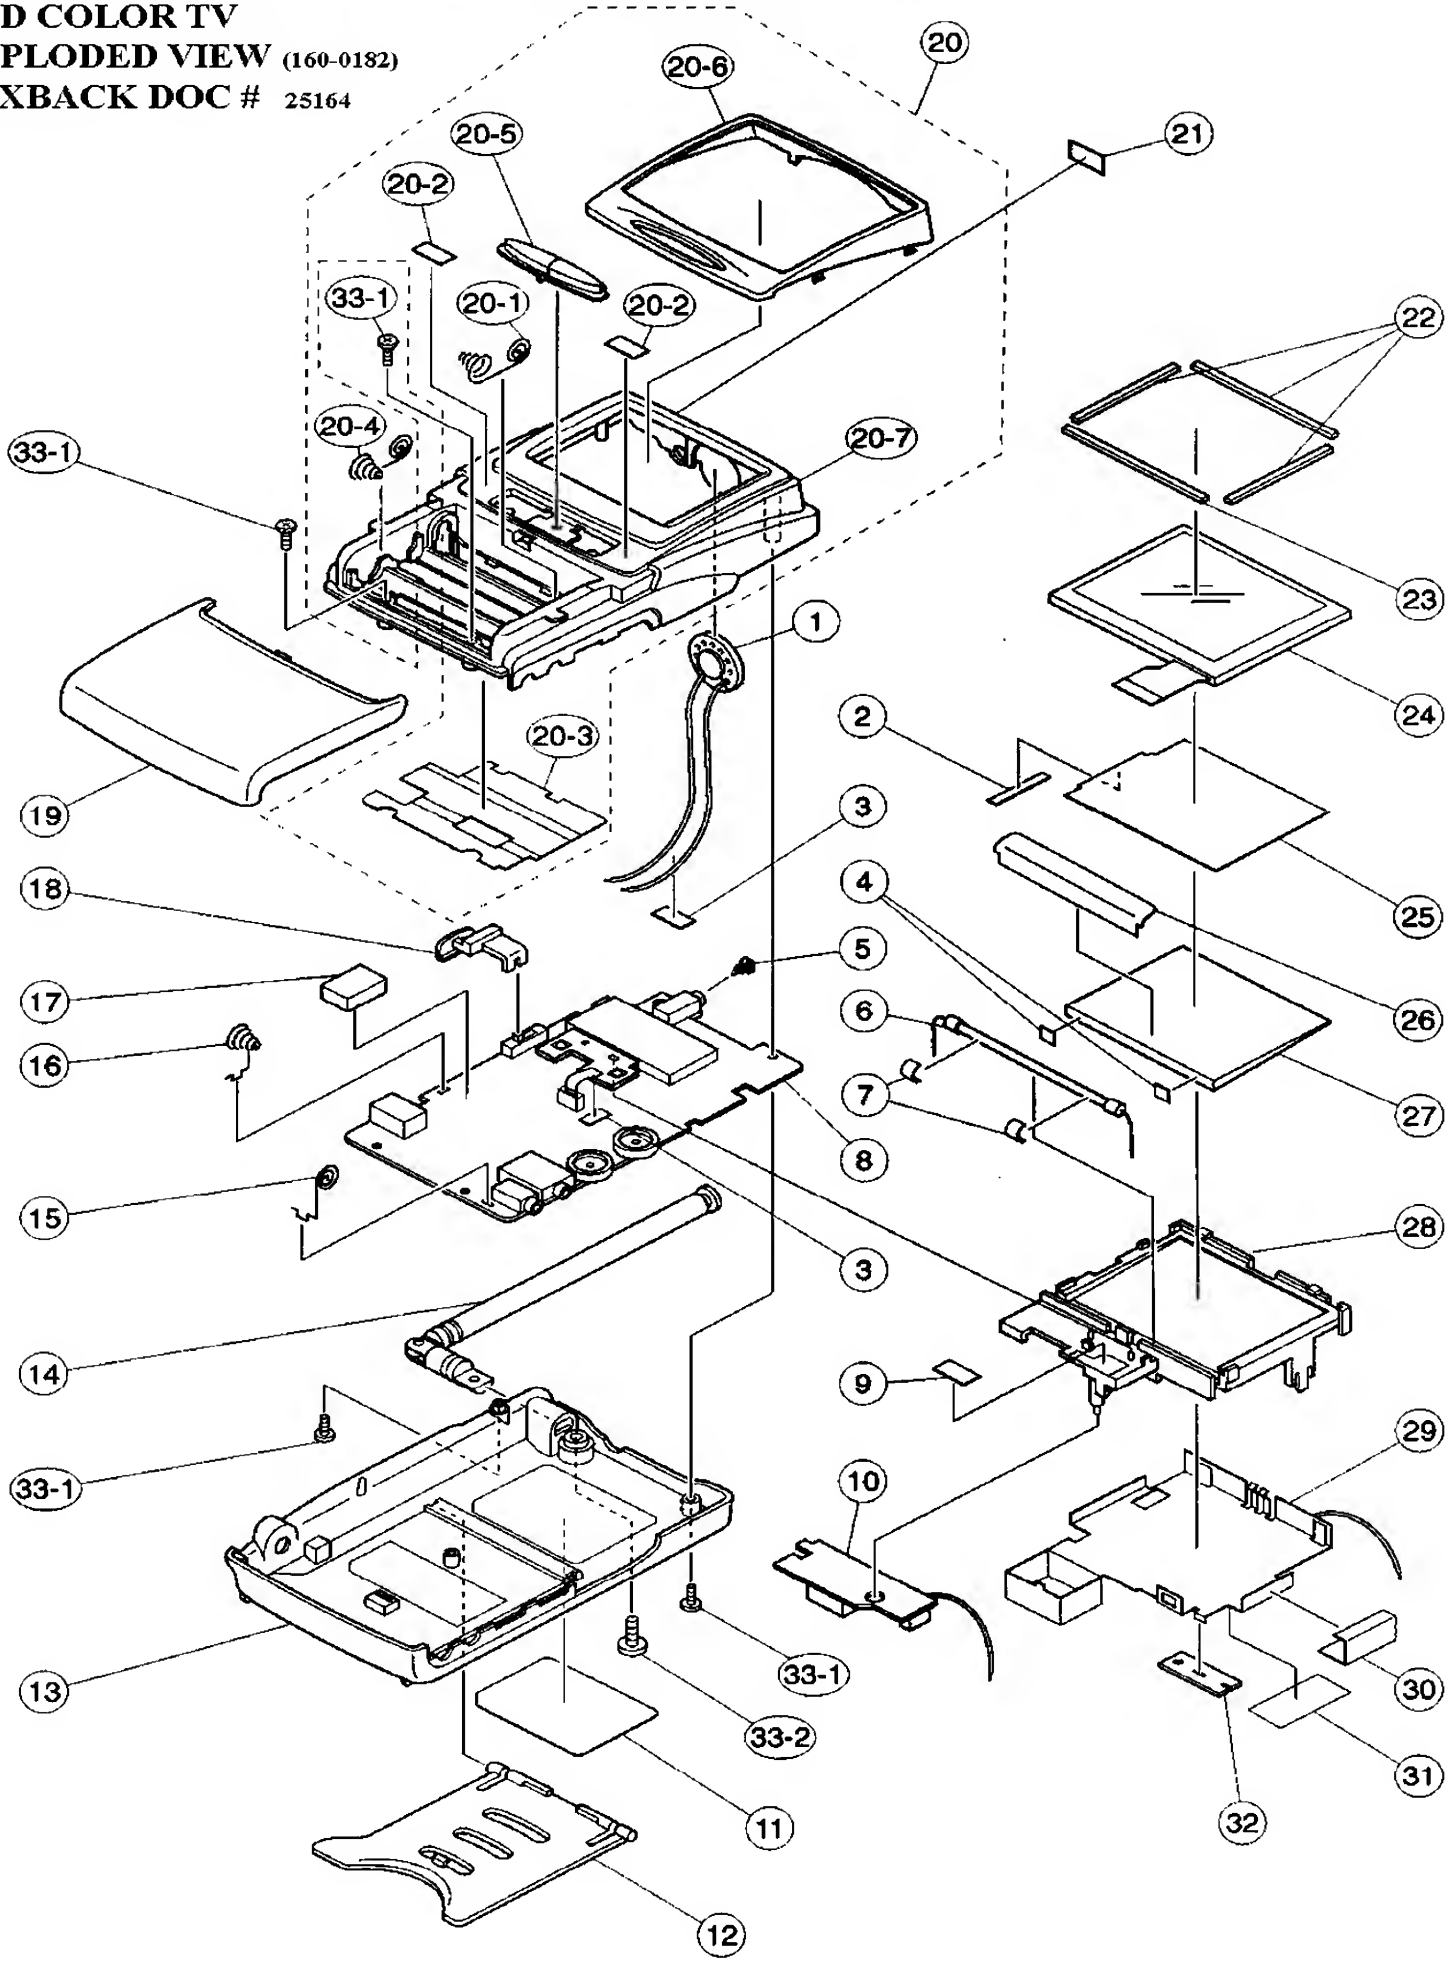
LCD COLOR TV
EXPLODED VIEW (160-0182)
FAXBACK DOC # 25164